





Williams Std Body Cabinet Dimensions
Do not re-distribute without consent from Greg Butcher (mameman)
NOT FOR COMMERCIAL USE

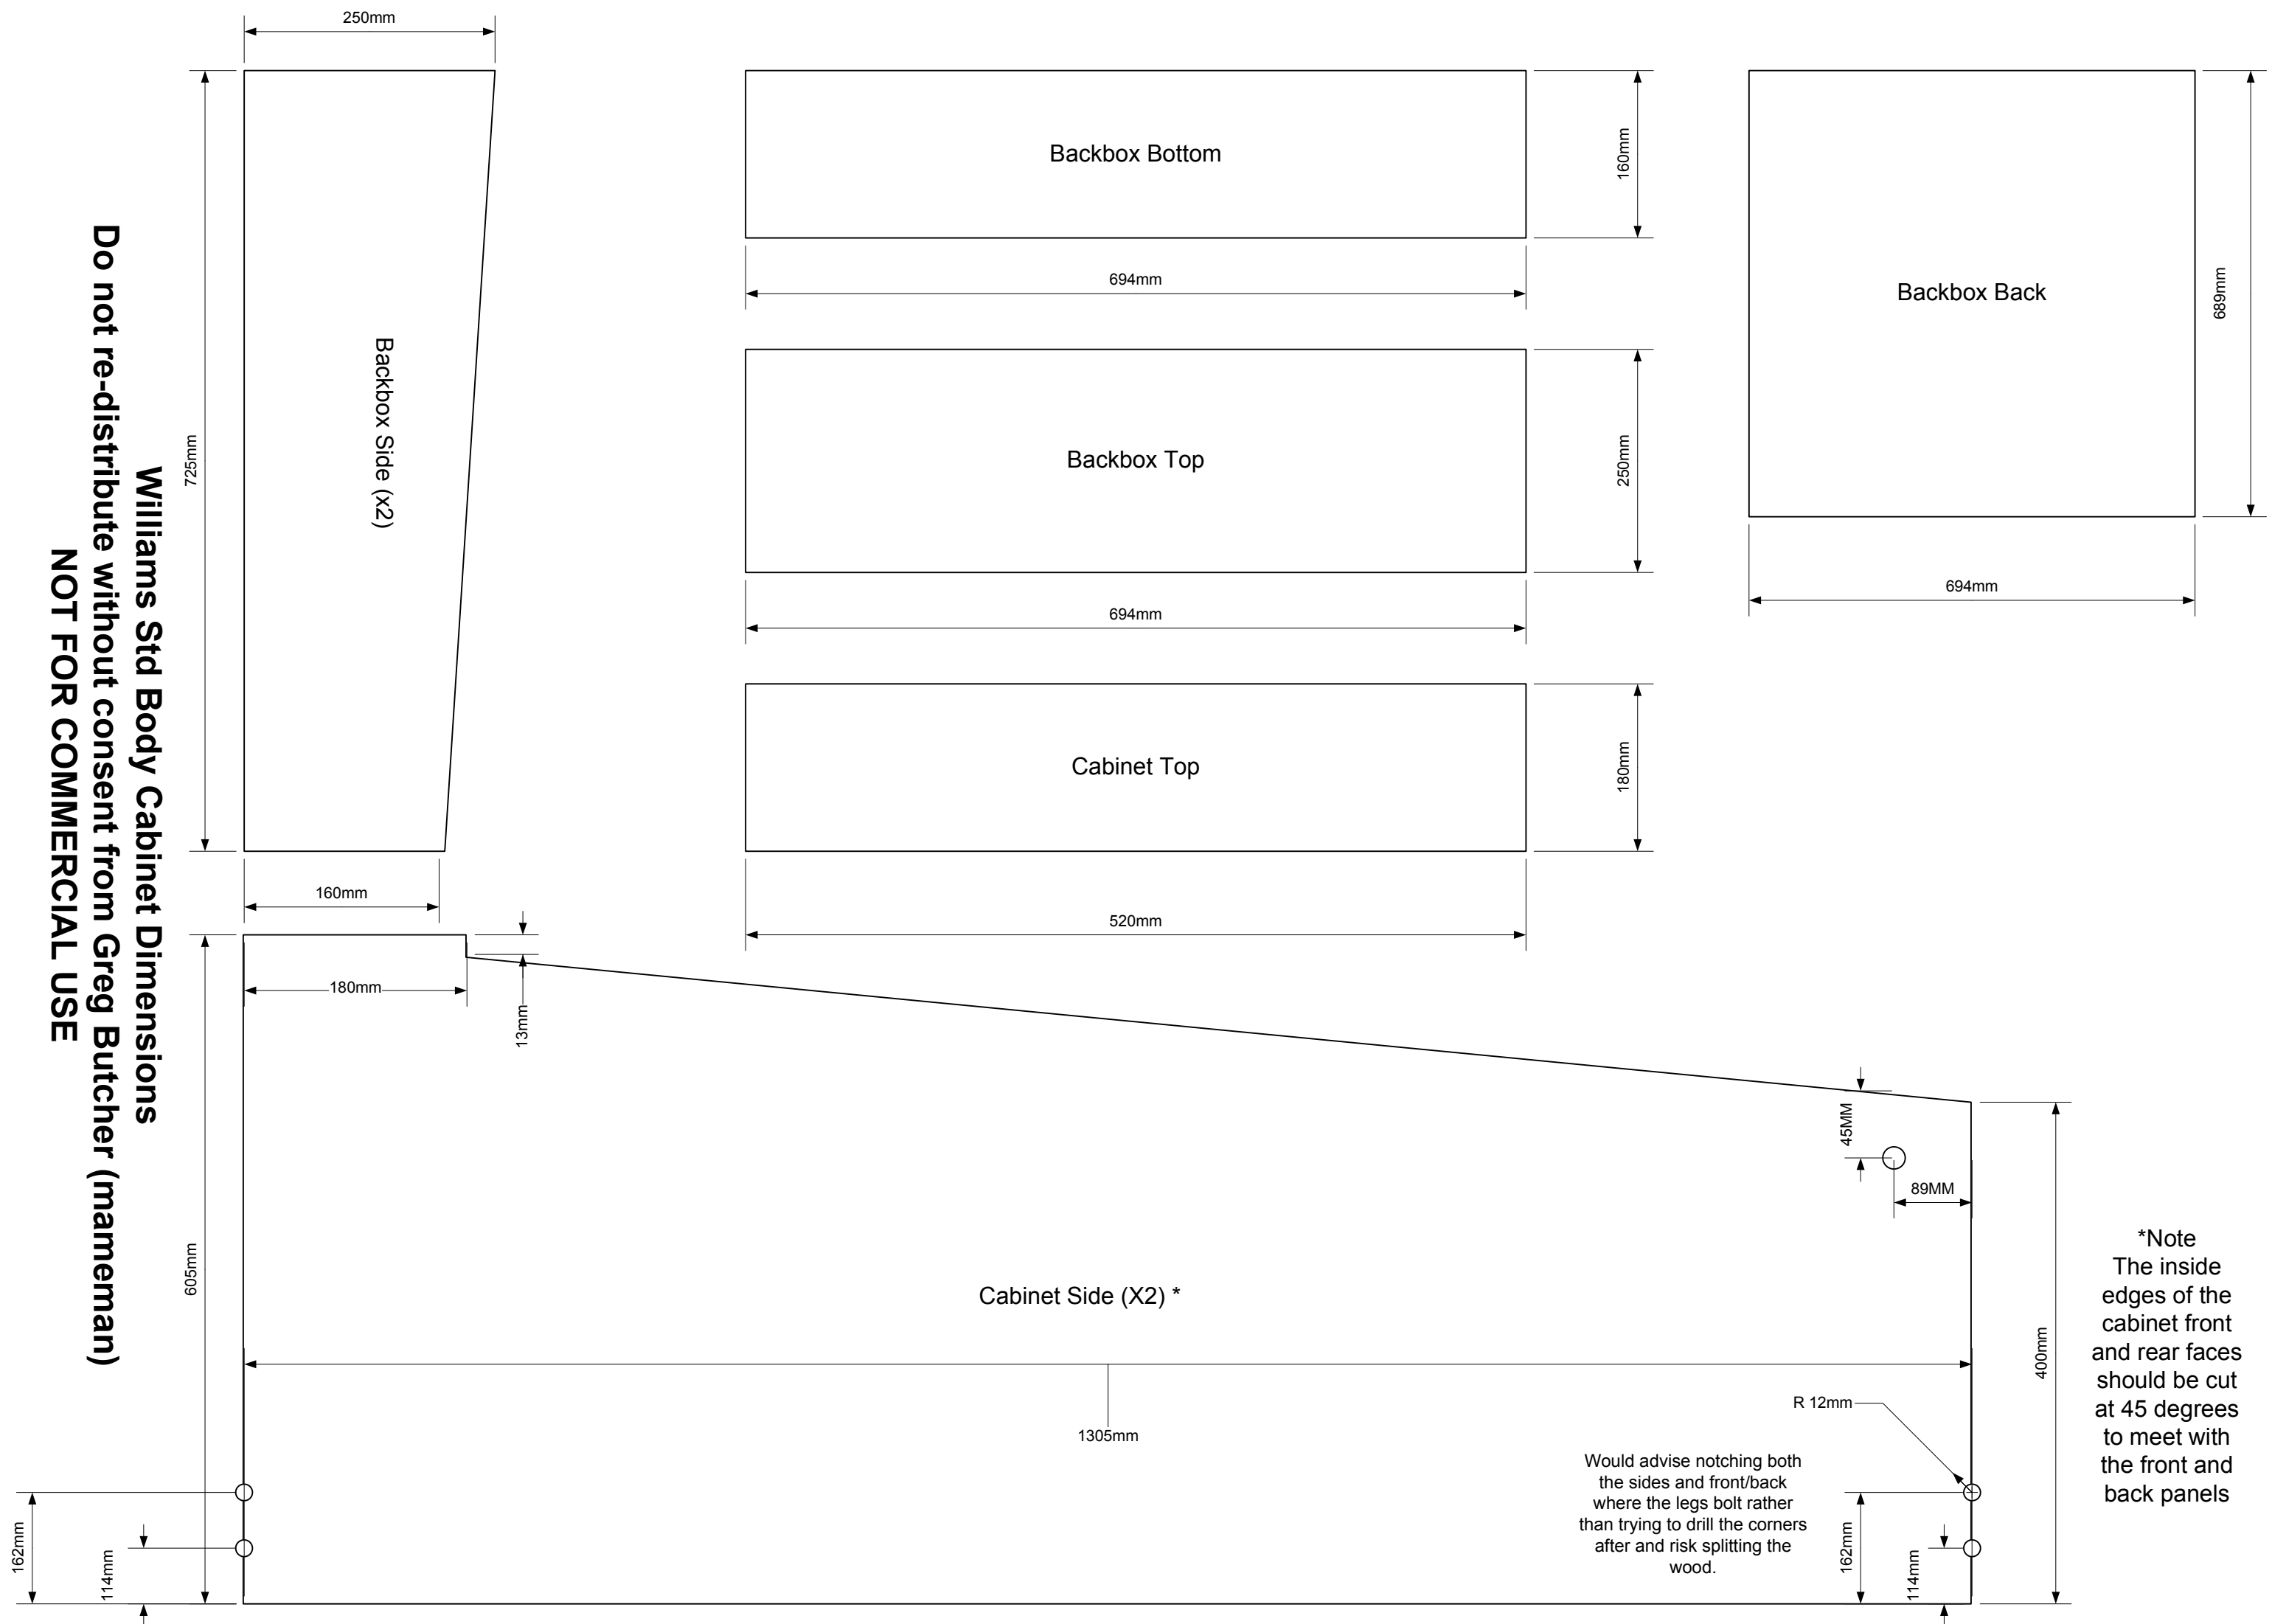

Would advise notching both the sides and front/back where the legs bolt rather than trying to drill the corners after and risk splitting the wood.

***Note**
The inside edges of the cabinet front and rear faces should be cut at 45 degrees to meet with the front and back panels

Williams Widebody Cabinet Dimensions

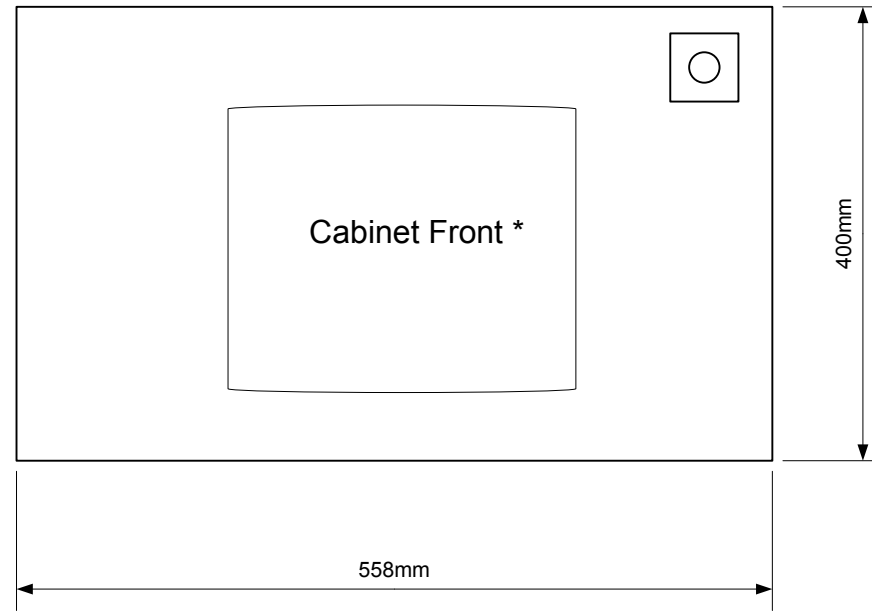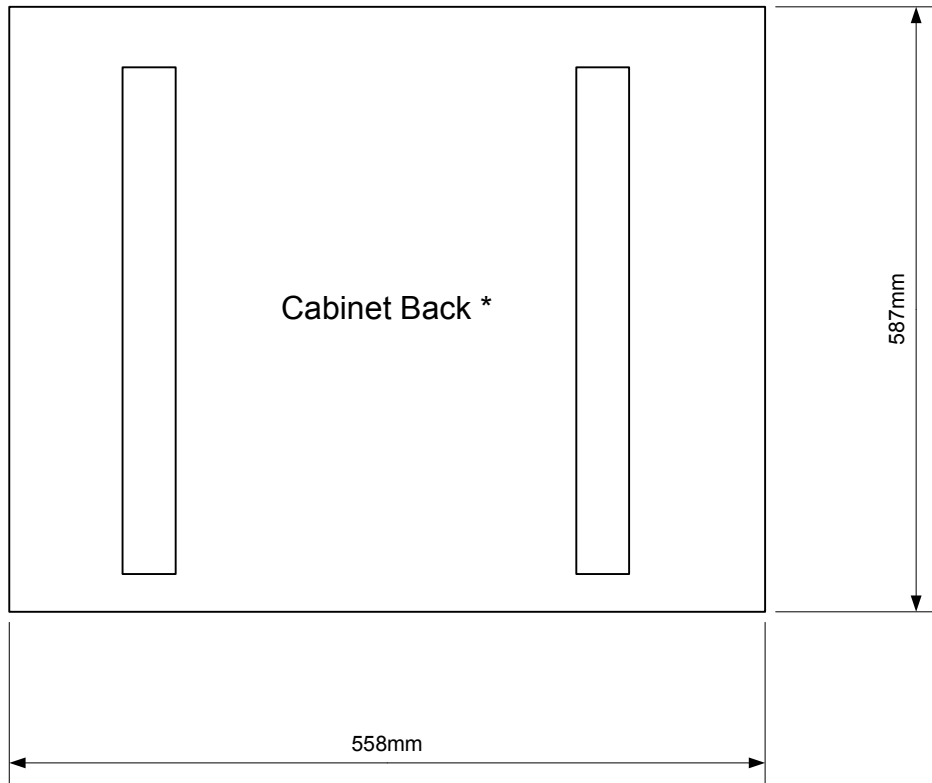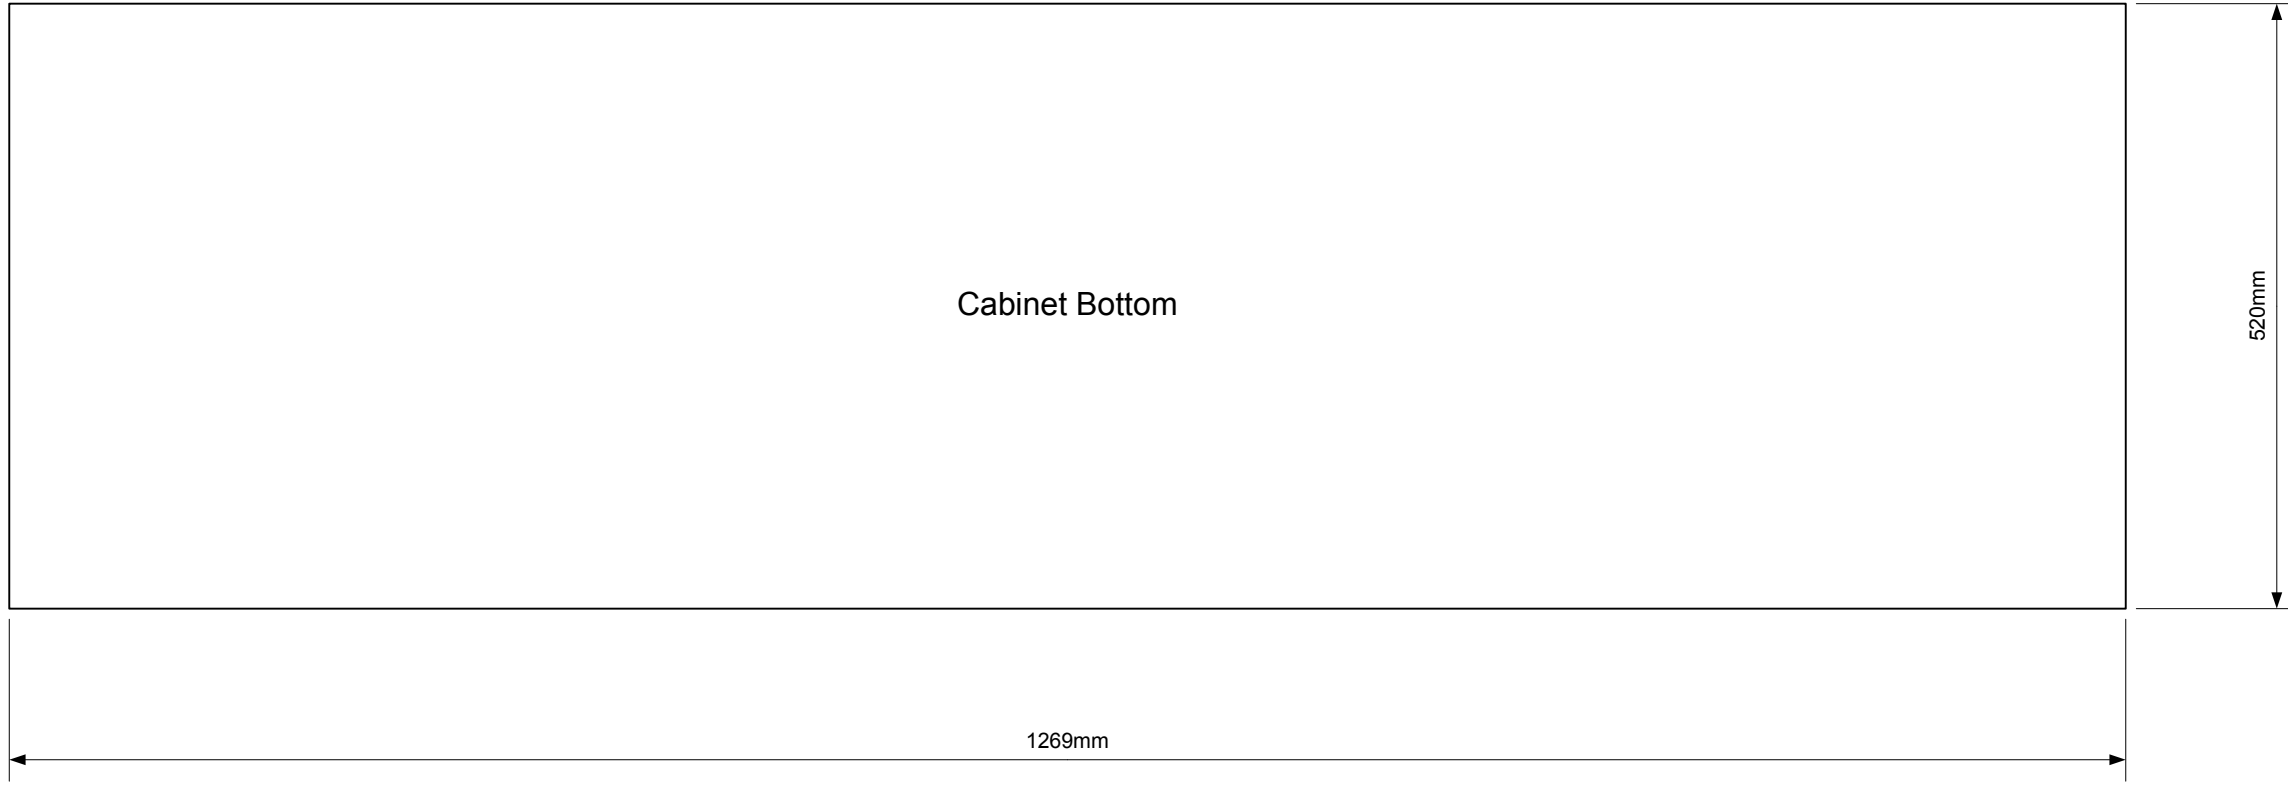

***Note**
The inside edges of the cabinet front and rear panels should be cut at 45 degrees to meet with the cabinet side panels